



Ingeniería y Abastecimiento , S.A. de C.V.

Tel. 0181 81255625 , Fax. 0181 83726096 , gpuga@inasa.com.mx , www.inasa.mx

Chihuahua - Hermosillo - Mexico - Monclova - Monterrey - Puebla - Ramos Arizpe - Saltillo - San Luis - Silao - Toluca



05 NOVIEMBRE 2019



	Num. de Catalogo	Descripción	Almacén	Cantidad
1	2NC3H0122	CONTACTOR FUJI ELEC 2NC3H0122 ELECTRICAL SC-6N TYP	SILM	1
2	3GC0T0M22	SC-N1/G MAGNETIC CONTACTOR	MTY	3
3	3GC1Q0M22	3GC1Q0M22 CONTACTOR MAGNETICO NO REVERSIBLE 60 AMP	MTY	1
4	3GC1Q0M22	3GC1Q0M22 CONTACTOR MAGNETICO NO REVERSIBLE 60 AMP	TOLG	1
5	3GC1Q0R22	3GC1Q0R22 CONTACTOR MAGNETICO NO REVERSIBLE 60 AMP	TOLG	1
6	3GC1Q0R22	3GC1Q0R22 CONTACTOR MAGNETICO NO REVERSIBLE 60 AMP	TOLV	1
7	3NC0T0122	SC-N1 AC110V ODYSSEY SERIES CONTACTOR 100-120VAC 5	MTY	5
8	3NC1Q0222	3NC1Q0222 CONTACTOR 220V 2NO + 2NC FUJI	AAGMC	1
9	3NC1Q0222	3NC1Q0222 CONTACTOR 220V 2NO + 2NC FUJI	MTY	4
10	3NC1Q0222	3NC1Q0222 CONTACTOR 220V 2NO + 2NC FUJI	SILM	1
11	3NC1Q0E22	3NC1Q0E22 CONTACTOR MAGNETICO 3P 50AMP MCA. FUJI	MTY	7
12	3NC2H0122	3NC2H0122 CONTACTOR 3 POLOS 110-120V 2NC + 2NO FUJ	MTY	2
13	3NC2T0122	SC-N4 AC110V ODYSSEY SERIES CONTACTOR 100-120VAC 5	MTY	7
14	3NC3H0222	3NC3H0222 - CONTACTOR MAGNETICO - FUJI ELECTRIC	MTY	1
15	4GC0A0101	SC-03/G DC100V 1NC MCA FUJI ELECTRIC	MTY	19
16	4GC0A0M10	4GC0A0M10 CONTACTOR MAGNETICO 11 AMPS. TIPO ABIERT	MTY	2
17	4GC0G0102	SC-05/G DC100V 2NCP MCA FUJI ELECTRIC	MTY	37
18	4GC0G0M11	4GC0G0M11 CONTACTOR MAGNETICO 13 AMPS. TIPO ABIERT	MTY	35
19	4GC0G0M11	4GC0G0M11 CONTACTOR MAGNETICO 13 AMPS. TIPO ABIERT	SILM	2
20	4GC0Q0M01	4GC0Q0M01 CONTACTOR MAGNETICO 20 AMPS. TIPO ABIERT	MTY	2
21	4GC0R0M10	4GC0R0M10 CONTACTOR 11KW 1NO 24V FUJI	MTY	9
22	4GH4221	RELAY 4POLE 2NO/2NC 125VDC SH-4/G	MTY	2
23	4NC0A0110Y	CONTACTOR MAGNETICO SC-03Y 60HZ / AC110V 50 HZ 1A,	MTY	3
24	4NC0A0E10	4NC0A0E10 CONTACTOR MAGNETICO 24V 11A 1NO FUJI	MTY	1
25	4NC0F0101	4NC0F0101 CONTACTOR MAGNETICO 110V 13A 1NC	MTY	3
26	4NC0F0110	4NC0F0110 CONTACTOR MAGNETICO 110V 13A 1NO	MTY	4
27	4NC0F0110	4NC0F0110 CONTACTOR MAGNETICO 110V 13A 1NO	SILM	1

28	4NCOF0201	4NCOF0201 CONTACTOR MAGNETICO 220V 13A 1NC	MTY	2
29	4NCOF0210	4NCOF0210 CONTACTOR MAGNETICO 220V 13A 1NO	MTY	4
30	4NCOF0B01	4NCOF0B01 CONTACTOR MAGNETICO 200-220V FUJI ELECTR	MTY	1
31	4NCOF0B10	4NCOF0B10 CONTACTOR 13 AMP MAG COIL 200-220VAC 1N	MTY	11
32	4NCOF0E01	4NCOF0E01 CONTACTOR MAGNETICO 24V 13A 1NC	MTY	1
33	4NCOF0E10	4NCOF0E10 CONTACTOR MAGNETICO 24V 13A 1NO FUJI	MTY	2
34	4NCOG0102	4NCOG0102 CONTACTOR MAGNETICO 110-120V 2NC 20A FUJ	MTY	2
35	4NCOG0111	4NCOG0111 CONTACTOR MAGNETICO 110V 1NO + 1NC FUJI	AAMP6	1
36	4NCOG0111	4NCOG0111 CONTACTOR MAGNETICO 110V 1NO + 1NC FUJI	MTY	3
37	4NCOG0202	4NCOG0202 SC-05 CONTACTOR MAGNETICO, 20 AMP. 220-2	MTY	3
38	4NCOGCK	KIT DE CONTACTORES PARA SC05 4NCOG-CK FUJI	MTY	20
39	4NCOH0111Y	4NCOH0111Y CONTACTOR MAGNETICO 20 AMPS. 1NA-1NC BO	MTY	2
40	4NCOH1MC	4NCOH-1MC BOBINA 110-120V FUJI ELETRIC	MTY	4
41	4NCOH2MC	4NCOH-2MC BOBINA 220-240V FUJI ELECTRIC	MTY	6
42	4NCOHAMC	4NCOH-AMC BOBINA 100-110V FUJI ELECTRIC	MTY	5
43	4NCOHCK	KIT DE CONTACTORES PARA SC51 ANCOH-CK FUJI	MTY	20
44	4NCOHCMC	4NCOH-CMC BOBINA 400-440V FUJI ELECTRIC	MTY	5
45	4NCOHEMC	4NCOH-EMC BOBINA 24V FUJI ELECTRIC	MTY	5
46	4NCOHGMC	4NCOH-GMC BOBINA120-130V FUJI ELECTRIC	MTY	5
47	4NCOQ0210	CONTACTOR 4NCOQ0210 FUJI ELECTRIC 240 VAC 3.7 KW A	MTY	4
48	4NCOQ0A10	CONTACTOR FUJI ELEC 4NCOQ0A10 MAGNETIC CONTACTOR O	AAGMC	1
49	4NK0ACY	4NK0ACY RELEVADOR DE SOBRE CARGA, BIMETALICO FUJI	MTY	2
50	4NK0AE	4NK0AE OVERLOAD RELAY 0.48-0.72 AMP	AAMP6	4
51	4NK0AH	4NK0AH OVERLOAD RELAY 0.95-1.45 AMP	AAMP6	1
52	4NK0AH	4NK0AH OVERLOAD RELAY 0.95-1.45 AMP	MTY	18
53	4NK0AH	4NK0AH OVERLOAD RELAY 0.95-1.45 AMP	SILM	1
54	4NK0AJ	RELAY FUJI ELEC 4NK0AJ TK-ON 1.4-2.2A OVERLOAD	AAMP6	1
55	4NK0AJ	RELAY FUJI ELEC 4NK0AJ TK-ON 1.4-2.2A OVERLOAD	MTY	16
56	4NK0HT	RELAY FUJI ELEC 4NK0HT OVERLOAD TK-5-1 9-13AMPS	MTY	1
57	4NW0A0AJ10K	STARTER FUJI ELECTRIC 4NW0A0AJ10K IEC MOTOR STARTE	SILM	1
58	4SH422A	4SH422A - SH-4 AC100-110V 60HZ 2NO 2NC - FUJI ELEC	MTY	5
59	4SH844A	4SH844A - CONTACTOR 100-110VAC 4NO - 4NC - FUJI EL	MTY	11
60	4SH853A	4SH853A - CONTACTOR 100-110VAC 5NO - 3NC - FUJI EL	MTY	7
61	4SH862A	4SH862A - CONTACTOR 100-110VAC 6NO - 2NC - FUJI EL	MTY	6
62	AC09RX0111L1	AC09-RX0/11L1 SWITCH TOTATIVO MCA. FUJI	MTY	1
63	AC09RX0111LEA02	SWITCH FUJI ELEC AC09-RX0/11L1EA02 ROTARY SWITCH	SILM	1
64	AC09RX1111L1	SWITCH FUJI ELEC AC09-RX1/11L1 SWITCH ROTARY START	SILM	1
65	AC09RY120L1	SWITCH FUJI ELEC AC09-RY1/20L1 SWITCH ROTARY START	SILM	1
66	AH164J2A11B	SWITCH POS KEY 1N/O+1N/C AUX KEY #AH164-J2A11B MCA	MTY	4
67	AH164J2A11C	SELECTOR SWITCH 2 POSITION MAINTAINED W/ KEY REMOV	SILG	5
68	AH164SLW11E3	AH164SLW11E3 SWITCH BOTON ILUMINADO AH164-SLW11E3	MTY	4
69	AH164TGL011E3	AH164-TGLO11E3 BOTON ILUMINADO FLUSH RECTANGULAR N	MTY	11
70	AH164TGL011E3	AH164-TGLO11E3 BOTON ILUMINADO FLUSH RECTANGULAR N	SILG	2
71	AH164TGLG11E3	AH164-TGLG11E3 BOTON ILUMINADO FLUSH RECTANGULAR V	MTY	1
72	AH164TGLR11E3	AH164-TGLR11E3 BOTON ILUMINADO FLUSH RECTANGULAR R	MTY	13
73	AH164TLG11E3	AH164TLG11E3 SWITCH BOTON ILUMINADO AH164-TLG11E3	MTY	15

74	AH164TLR11E3	AH164-TLR11E3 BOTON RECTANGULAR ILUMINADO ROJO 24V	MTY	5
75	AH164TLW11E3	AH164-TLW11E3 BOTON RECTANGULAR ILUMINADO BLANCO 2	MTY	20
76	AH164TLY11E3	AH164TLY11E3 SWITCH BOTON ILUMINADO #AH164-TLY11E3	MTY	5
77	AH164TX1BE	AH164-TX1BE ZUMBADOR SONIDO ALTO 12-24 AC/DC FUJI	MTY	7
78	AH164Z0E3	AH164-Z0E3 LAMPARA INDICADORA EXTENDED ROUND FLAT	MTY	3
79	AH164ZGE3	AH164-ZGE3 LAMPARA INDICADORA EXTENDED ROUND FLAT	MTY	10
80	AH164ZRE3	AH164-ZRE3 LAMPARA INDICADORA EXTENDED ROUND FLAT	MTY	10
81	AH164ZT0E3	AH164-ZT0E3 LAMPARA INDICADORA FLUSH RECTANGULAR F	MTY	13
82	AH164ZTGE3	AH164-ZTGE3 LAMPARA INDICADORA FLUSH RECTANGULAR F	MTY	11
83	AH164ZTRE3	AH164-ZTRE3 LAMPARA INDICADORA FLUSH RECTANGULAR F	MTY	13
84	AH164ZTWE3	AH164-ZTWE3 LAMPARA INDICADORA FLUSH RECTANGULAR F	MTY	12
85	AH164ZYE3	AH164-ZYE3 LAMPARA INDICADORA EXTENDED ROUND FLAT	MTY	13
86	AH1652SFLG11E3	SWITCH FUJI ELEC AH165-2SFLG11E3 SWITCH PUSH BUTTO	AAGMC	5
87	AH1652SFLG11E3	SWITCH FUJI ELEC AH165-2SFLG11E3 SWITCH PUSH BUTTO	MTY	5
88	AH1652SFLG11E3	SWITCH FUJI ELEC AH165-2SFLG11E3 SWITCH PUSH BUTTO	SILM	2
89	AH165J2A22A	AH165-J2A22A INTERRUPTOR SELECTOR DE LLAVE 2 POSIC	MTY	5
90	AH165JK3G22A	SWITCH FUJI ELECTRIC AH165-JK3G22A SWITCH AH165: O	SILM	1
91	AH165JM2A22A	SWITCH SELECTOR 2 POSITION KEY WITH RECTANGULAR BE	AAMP6	1
92	AH165JM2A22A	SWITCH SELECTOR 2 POSITION KEY WITH RECTANGULAR BE	SILM	2
93	AH165P2B11	SWITCH FUJI AH165-P2B11 SELECTOR SWITCH 24VDC 0.7A	SILM	1
94	AH165P2B22	AH165-P2B22 INTERRUPTOR SELECTOR DE PALANCA CORTA	MTY	11
95	AH165SFG11	SWITCH FUJI ELECTRIC AH165-SFG11 PUSHBUTTON, GREEN	SILM	1
96	AH165SFW11	SWITCH FUJI ELECTRIC AH165-SFW11 PUSHBUTTON, WHITE	SILM	1
97	AH165SGFW11	SWITCH FUJI ELECTRIC AH165-SGFW11 PUSHBUTTON SWITC	SILM	1
98	AH165SLG11E3	SWITCH FUJI ELECTRIC AH165-SLG11E3 PUSHBUTTON, GRE	MTY	2
99	AH165SLG11E3	SWITCH FUJI ELECTRIC AH165-SLG11E3 PUSHBUTTON, GRE	SILG	2
100	AH165SLY11E3	SWITCH FUJI ELECTRIC AH165-SLY11E3 PUSHBUTTON, YEL	AAGMC	1
101	AH165SLY11E3	SWITCH FUJI ELECTRIC AH165-SLY11E3 PUSHBUTTON, YEL	AAMM	1
102	AH165SLY11E3	SWITCH FUJI ELECTRIC AH165-SLY11E3 PUSHBUTTON, YEL	MTY	7
103	AH165SP2B11	SWITCH KNOB WITH SQUARE BEZEL 2 POS 90 DEG #AH165-	AAGMC	4
104	AH165SP2B11	SWITCH KNOB WITH SQUARE BEZEL 2 POS 90 DEG #AH165-	MTY	2
105	AH165TFG11	SWITCH FUJI ELEC AH165-TFG11 SWITCH PUSH BUTTON GR	AAGMC	1
106	AH165TFR11	BOTON PULSADOR ROJO MOD. AH165-TFR11 *FUJI	AAGMC	2
107	AH165TFS11	BOTON PULSADOR AZUL MOD. AH165-TFS11 *FUJI	AAGMC	2
108	AH165TFW11	BOTON PULSADOR BLANCO MOD. AH165-TFW11 *FUJI	AAGMC	2
109	AH165TGFG11	BOTON PULSADOR VERDE 1NA-1NC AH165-TGFG11 FUJI ELE	MTY	10
110	AH165TGFR11	BOTON PULSADOR ROJO 1NA-1NC AH165-TGFR11 FUJI ELEC	MTY	10
111	AH165TGFW11	BOTON PULSADOR BLANCO 1NA-1NC AH165-TGFW11 FUJI EL	MTY	15
112	AH165TGFW11	BOTON PULSADOR BLANCO 1NA-1NC AH165-TGFW11 FUJI EL	SILM	1
113	AH165TGLW11E3	SWITCH FUJI ELEC AH165-TGLW11E3 PUSH BUTTON OPERAT	SILM	1
114	AH165TLG11E3	BOTON PULZADOR CON LAMPARA VERDE MOD.AH165TLG11E3	SILM	1
115	AH165TLW11E3	BOTON PULSADOR CON LAMPARA BLANCO MOD.AH165-TLW11E	SILM	2

116	AH165TLY11E3	SWITCH FUJI ELEC AH165-TLY11E3 SWITCH,PUSH BUTTON;	SILM	1
117	AH165ZS0E3	LAMP FUJI ELEC AH165-ZS0E3 LAMP 24V DC OIL-TIGHT T	SILM	1
118	AH165ZSRE3	LAMP FUJI ELEC AH165-ZSRE3 LAMP 24V DC OIL-TIGHT T	SILM	2
119	AH165ZSWE3	LAMP FUJI ELEC AH165-ZSWE3 LAMP 24V DC OIL-TIGHT T	SILM	1
120	AH165ZT0E3	AH165-ZT0E3 LAMPARA PILOTO 16MM SIN TRANSFORMADOR	MTY	18
121	AH165ZTGE3	LAMPARA RECTANGULAR VERDE 24VDC LED #AH165-ZTGE3 M	SILM	1
122	AH165ZTRE3	AH165-ZTRE3 LAMPARA PILOTO 16MM SIN TRANSFORMADOR	MTY	18
123	AH165ZTWE3	AH165-ZTWE3 LAMPARA PILOTO 16MM SIN TRANSFORMADOR	MTY	18
124	AH22PC3B172	AH22PC3B172 SWITCH SELECTOR # AH22-PC3B172 "FUJI"	MTY	3
125	AH30P3B22	AH30P3B22 SWITCH SELECTOR # AH30-P3B22 "FUJI"	MTY	3
126	AHX779B	AHX779-B PALANCA ROTATORIA PARA INTERRUPTOR TERMOM	MTY	5
127	AR2210B	BOTON NEGRO MOD.AR22-10B MCA .FUJI, (AR22FOR11B)	MTY	3
128	AR22E0L10E3G	SWITCH, PUSHBUTTON MFG: FUJI ELEC PN: AR22E0L-10E3	AAMP6	2
129	AR22E0L10E4A	PUSHBUTTON OPERATOR ILLUMINATED	MTY	5
130	AR22E0L11E3G	BOTON DE CONTROL 22MM DIAM. ILLUMINADO 24V AC/DC EX	MTY	6
131	AR22E0L11E3R	BOTON DE CONTROL 22MM DIAM. ILLUMINADO 24V AC/DC EX	MTY	20
132	AR22E0L11E3Y	BOTON DE CONTROL 22MM DIAM. ILLUMINADO 24V AC/DC EX	MTY	10
133	AR22E0R01R	PUSHBUTTON SWITCH EXTENDED ROUND HEAD #AR22E0R-01R	MTY	15
134	AR22E5L20E3W	AR22E5L-20E3W BOTON PULSADOR ILLUMINADO FUJI ELECTR	MTY	10
135	AR22F0L10E3G	PUSHBUTTON SWITCH ILLUMINATED #AR22F0L-10E3G MCA F	SILM	2
136	AR22F0L10E4G	MOD. AR22F0L10E4G PUSH BUTTON FUJI	MTY	10
137	AR22F0L11E3A	AR22F0L-11E3A BOTON22MM FUJI ELECTRIC	MTY	5
138	AR22F0L11E3G	AR22F0L-11E3G BOTON22MM FUJI ELECTRIC	MTY	3
139	AR22F0M10E3W	AR22F0M-10E3W BOTON ILLUMINADO CUADRADO 22MM COLOR	MTY	33
140	AR22F0P10E3G	AR22F0P-10E3G BOTON DE CONTROL, RAZANTE, GUARDA CU	MTY	2
141	AR22F0R10B	SWITCH PUSHBUTTON OPERATOR 1NO CONTACTS BLACK #AR2	AAMP6	1
142	AR22F0R10B	SWITCH PUSHBUTTON OPERATOR 1NO CONTACTS BLACK #AR2	MTY	1
143	AR22F0R10B	SWITCH PUSHBUTTON OPERATOR 1NO CONTACTS BLACK #AR2	SILG	1
144	AR22F0R10R	SWITCH FUJI ELEC AR22F0R-10R PUSHBUTTON SWITCH FL	SILG	2
145	AR22F0R10R	SWITCH FUJI ELEC AR22F0R-10R PUSHBUTTON SWITCH FL	SILM	5
146	AR22F0R10W	PUSHBUTTON SWITCH FLUSH ROUND HEAD #AR22F0R-10W MC	SILM	1
147	AR22F0R10Y	AR22F0R-10Y BOTÓN PULSADOR DE CABEZA REDONDA FUJI	SILM	1
148	AR22F0R11B	BOTON DE CONTROL 22MM DIAM. TIPO CORTO MOMENTANEO	MTY	5
149	AR22F0R11G	BOTON DE CONTROL 22MM DIAM. TIPO CORTO MOMENTANEO	MTY	24
150	AR22F0R11R	BOTON DE CONTROL 22MM DIAM. TIPO CORTO MOMENTANEO	MTY	28
151	AR22F0R11W	BOTON DE CONTROL 22MM DIAM. TIPO CORTO MOMENTANEO	MTY	5
152	AR22F0R11Y	BOTON DE CONTROL 22MM DIAM. TIPO CORTO MOMENTANEO	MTY	2
153	AR22F0S10G	AR22F0S-10G BOTON PULSADOR 22MM CUADRADO VERDE 1NO	MTY	15
154	AR22F5M10E3A	AR22F5M-10E3A BOTON PULSADOR 22" MCA. FUJI	MTY	20
155	AR22F5M10E3W	AR22F5-M10E3W BUTTON,PUSH FUJI ELECTRIC	MTY	10
156	AR22G2L11E3G	BOTON DE CONTROL 22MM DIAM. ILLUMINADO 24V AC/DC EX	MTY	5
157	AR22G4L10E3G	SWITCH FUJI ELEC AR22G4L-10E3G ILLUMINATED PUSHBUT	MTY	8
158	AR22G4L10E3G	SWITCH FUJI ELEC AR22G4L-10E3G ILLUMINATED PUSHBUT	SILM	2
159	AR22G4L10E3R	AR22G4L-10E3R SWITCH PUSH BUTTON N.O. SPST EXTEND	MTY	10

160	AR22G4L10E3W	AR22G4L10E3W PUSH BUTTON SWITCH #AR22G4L10E3W *FUJ	MTY	10
161	AR22G4L11E3G	MOD. AR22G4L11E3G, PUSH BUTTON FUJI	MTY	10
162	AR22G4L11E3W	AR22G4L11E3W BOTON PULSADOR ILUMINADO FUJI ELECTRI	MTY	10
163	AR22G4L20E3S	AR22G4L-20E3S ILLUMINATION PUSH BUTTON SWITCH FU	MTY	6
164	AR22JAR2A10A	AR22JAR2A10A - SELECTOR CON 2 POSICIONES NO/NC - F	MTY	10
165	AR22JCR3C174A	AR22JCR-3C174A SELECTOR 22MM FUJIELECTRIC	MTY	10
166	AR22JR2A10A	MOD. AR22JR-2A10A, INTERRUPTOR FUJI	AAMP6	3
167	AR22JR2A11A	INTERRUPTOR SELECTOR DE LLAVE 22MM DIAM. 2 POSICIO	MTY	4
168	AR22JR2D11A	SWITCH FUJI ELEC AR22-JR-2D11A KEY	SILG	2
169	AR22JR3E11A	KEYSWITCH 3 POSITION 22MM 1 N.O. 1 N.C. #AR22JR-3E	AAMP6	1
170	AR22M0R11G	BOTON DE CONTROL 22MM DIAM. IP40 TIPO HONGO 40MM.	MTY	10
171	AR22M0R11R	AR22M0R-11R PUSH BUTTON EMERGENCY STOP FUJI ELECTR	MTY	20
172	AR22M0R11Y	BOTON DE CONTROL 22MM DIAM. TIPO HONGO 40MM. CONTA	MTY	30
173	AR22M0R22B	AR22M0R-22B PUSH BUTTON, MUSHROOM HEAD, 22MM, 2NO+	MTY	40
174	AR22M3R11G	AR22M3R-11 BOTON DE CONTROL TIPO HONGO COLOR VERDE	MTY	20
175	AR22PCR311CB	AR22PCR-311CB SELECTOR 3POSC. 2NC/2NO *FUJI	MTY	25
176	AR22PCR3172B	SWITCH FUJI ELEC AR22-PCR3172B SELECTOR 3 POSITION	AAGMC	1
177	AR22PCR3174B	AR22PCR3174B PUSHBUTTON/SELECTOR SWITCH 10AMP 600V	MTY	10
178	AR22PCR441CB	AR22PCR-441CB SELECTOR SWITCH MCA. FUJI	MTY	15
179	AR22PR201B	POS. SELECTOR SWITCH MAINTAINED	MTY	7
180	AR22PR210B	SWITCH FUJI ELEC AR22PR-210B SELECTOR 2 POSITION M	MTY	14
181	AR22PR211B	AR22PR-211B INTERRUPTOR SELECTOR 22MM DIAM. NO ILU	AAGMC	3
182	AR22PR211B	AR22PR-211B INTERRUPTOR SELECTOR 22MM DIAM. NO ILU	AAMM	2
183	AR22PR211B	AR22PR-211B INTERRUPTOR SELECTOR 22MM DIAM. NO ILU	MTY	18
184	AR22PR320B	INTERRUPTOR SELECTOR 22MM DIAM. NO ILUMINADO 3 POS	MTY	10
185	AR22Q2R02R	SWITCH MOD. AR22Q2R-02R	MTY	1
186	AR22S2R20B	SWITCH FUJI ELEC AR22-S2R-20B SELECTOR	MTY	7
187	AR22S2R22B	AR22S2R-22B BOTON SELECTOR COMBINADO DIAMETRO DE 2	MTY	10
188	AR22V2R01B	AR22V2R-01B PUSHBUTTON 40MM BLACK PUSH LOCK 1 N.C.	MTY	10
189	AR22V2R01R	AR22V2R01R BOTON COLO ROJO MCA FUJI	AAGMC	3
190	AR22V2R01R	AR22V2R01R BOTON COLO ROJO MCA FUJI	MTY	3
191	AR22VQR12R	AR22VQR-12R PARO DE EMERGENCIA 22MM ROJO FUJI ELEC	MTY	45
192	AR22VSR02R	SWITCH FUJI ELEC AR22VSR-02R PUSH LOCK, TURN RESET	SILM	2
193	AR22VSR11R	AR22VSR-11R BOTON22MM FUJI ELECTRIC	MTY	5
194	AR22WR122B	AR22WR-122B SWITCH SELECTOR DE 3 POSICIONES RETURN	MTY	2
195	AR22WR320B	INTERRUPTOR SELECTOR 22MM DIAM. NO ILUMINADO 3 POS	MTY	5
196	AR30A7NA0A0B	AR30A7N-A0A0B MONOLEVER SWITCH MCA FUJI ELECTRIC	MTY	4
197	AR30B1R11G	BOTON DE CONTROL 30MM DIAM. TIPO GRAN HONGO 75MM.	MTY	28
198	AR30B1R11Y	BOTON DE CONTROL 30MM DIAM. IP40 TIPO HONGO 40MM.	MTY	18
199	AR30B3R11B	AR30B3R-11B BLACK PUSHBUTTON WITH GIANT HEAD AND F	MTY	10
200	AR30E0L11E3G	AR30E0L-11E3G BOTON 30MM FUJI ELECTRIC	MTY	5
201	AR30E0L11E3GZM	AR30E0L-11E3GZM BOTON DE CONTROL ILUMINADO 30MM. T	MTY	7
202	AR30E0L11E3RZM	AR30E0L-11E3RZM BOTON DE CONTROL ILUMINADO 30MM. T	MTY	8
203	AR30E0L11E3WZM	AR30E0L-11E3WZM BOTON DE CONTROL ILUMINADO 30MM. T	MTY	8
204	AR30F0R10G	BUTTON FUJI ELEC AR30F0R-10G PUSH GREEN 1 NO CONTA	MTY	5
205	AR30F0R10SZM	AR30F0R-10SZM BOTON DE CONTROL NO ILUMINADO 30MM.	MTY	7
206	AR30F0R11G	BOTON DE CONTROL 30MM DIAM. IP40 TIPO CORTO CONTAC	MTY	33
207	AR30F0R11GZM	AR30F0R-11GZM PUSH BUTTON SWITCH FUJI ELECTRIC	MTY	10

208	AR30FOR11R	BOTON DE CONTROL 30MM DIAM. IP40 TIPO CORTO CONTAC	MTY	66
209	AR30FOR11RZM	AR30FOR-11RZM BOTON DE CONTROL NO ILUMINADO 30MM.	MTY	7
210	AR30G1R11G	AR30G1R-11G BOTON30MM FUJI ELECTRIC	MTY	5
211	AR30G2L11E3G	AR30G2L-11E3G PUSH BUTTON ILUMINADO FUJI ELECTRIC	MTY	1
212	AR30G3L10E3G	AR30G3L-10E3G BOTON DE CONTROL 30MM. ILUMINADO LED	MTY	9
213	AR30G3L11E3G	AR30G3L-11E3G BOTON RAZANTE, 30MM, GUARDA COMPLETA	MTY	3
214	AR30G3L11E3R	AR30G3L11E3R BOTON DE CONTROL ROJO FUJI ELECTRIC	MTY	5
215	AR30G4L10E3G	MOD. AR30G4L-10E3G, PUSH BUTTON FUJI	MTY	10
216	AR30JAR2A11BZM	AR30JAR-2A11BZM KEY SWITCH FUJI ELECTRIC	MTY	1
217	AR30JROA11A	AR30JR-0A11A SELECTOR 30MM FUJI ELECTRIC	MTY	5
218	AR30JR2A11A	AR30JR-2A11A SELECTOR CON LLAVE 30MM 2POS MCA. FUJ	MTY	8
219	AR30JR2A11B	AR30JR-2A11B SELECTOR 30MM. DE LLAVE 2 POS. MANTEN	MTY	2
220	AR30JR3A11AZM	AR30JR-3A11AZM KEY SWITCH FUJI ELECTRIC	MTY	2
221	AR30M0R11G	BOTON DE CONTROL 30MM DIAM. IP40 TIPO HONGO 40MM.	MTY	10
222	AR30PR011BZM	AR30PR-011BZM SELECTOR SWITCH FUJI ELECTRIC	MTY	1
223	AR30PR211B	INTERRUPTOR SELECTOR 30MM DIAM. NO ILUMINADO 2 POS	MTY	7
224	AR30PR311B	AR30PR-311B INTERRUPTOR SELECTOR 30MM DIAM. NO ILU	MTY	2
225	AR30V2R01R	AR30V2R01R BOTON DE EMPUJE # AR30V2R-01R *FUJI	MTY	10
226	AR30V2R10R	SWITCH FUJI ELECTRIC AR30V2R-10R PUSHBUTTON, RED M	SILM	1
227	AR30V5R22RZM	AR30V5R-22RZM BOTON PARO EMERGENCIA 30MM FUJI ELEC	MTY	1
228	AR9B290	BLOCK-CONT. 1NO. MOD. AR9B290 *FUJI	MTY	110
229	AR9B291	BLOCK-CONT. 1NC. MOD. AR9B291 *FUJI	MTY	115
230	AR9B291	BLOCK-CONT. 1NC. MOD. AR9B291 *FUJI	SILM	1
231	AR9B292	AR9B292 CONTACTO AUXILIAR FUJI ELECTRIC	MTY	10
232	AR9C012G	LENTE DE PLASTICO COLOR VERDE 22MM DIAM. PARA LAMP	MTY	20
233	AR9C022A	AR9C022-A LLAVES DE REEMPLAZO TIPO A PARA SELECTOR	MTY	10
234	AR9R008	AR9R008 PROTECTOR AMARILLO PARA PARO DE EMERGENCIA	MTY	40
235	BM3RHB020	MMS 20A 45MM ROTARY	MTY	1
236	BM3RSB004	MANUAL MOTOR STARTER ADJUSTABLE CURRENT RANGE IE 2	MTY	2
237	BM3RSB032	BM3RSB-032 ARRANCADOR 24-32A FUJI ELECTRIC	MTY	4
238	BM3RSBP63	MANUAL MOTOR STARTER 0.4-0.63AMP	MTY	2
239	BW100EAGU3P100	CIRCUIT BREAKER 100AMP 3POLE	MTY	2
240	BW125JAGU3P075	BW125JAGU-3P075 CIRCUIT BREAKER MCA. FUJI	MTY	2
241	BW125JAGU3P100	CIRCUIT BREAKER 100AMP 3POLE 690VAC 250VDC	MTY	2
242	BW125RAGU2P030	CIRCUIT BREAKER THERMAL MAGNETIC 2POLE 30A 690VAC	MTY	1
243	BW125RAGU2P100	CIRCUIT BREAKER THERMAL MAGNETIC 2POLE 100A 690VAC	MTY	1
244	BW125RAGU3P080	CIRCUIT BREAKER THERMAL MAGNETIC 3POLE 80A 690VAC/	MTY	1
245	BW125RAGU3P125	CIRCUIT BREAKER THERMAL MAGNETIC 3POLE 125A 690VAC	MTY	1
246	BW250RAGU3P225	BW250RAGU-3P225 INTERRUPTORTERMOMAGNETICO FUJIELEC	MTY	1
247	BW32AAG2P005	BW32AAG-2P005 INTERRUPTOR TERMOMAGNETICO G-TWIN 2	MTY	3
248	BW32AAG3P010	INTERRUPTOR 3P, 10A, FUJI ELECTRIC	MTY	2
249	BW32SAG2P030	BW32SAG-2P030 NO FUSE BREAKER MCA. FUJI	MTY	2
250	BW32SAG3P010	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 10A 690VA	MTY	8
251	BW50RAG2P010	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 10A 690VA	MTY	1
252	BW50RAG2P015	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 15A 690VA	MTY	1
253	BW50RAG2P020	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 20A 690VA	MTY	1
254	BW50RAG3P050	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 50A 690VA	MTY	1
255	BW50RAGU2P003	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 3A 690VAC	MTY	5
256	BW50RAGU2P005	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 5A 690VAC	MTY	1
257	BW50RAGU2P015	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 15A 690VA	MTY	2
258	BW50RAGU2P020	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 20A 690VA	MTY	1

259	BW50RAGU2P030	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 30A 690VA	MTY	1
260	BW50RAGU2P050	BW50RAGU-2P050 NO FUSE BREAKER	MTY	1
261	BW50RAGU3P005	BW50RAGU-3P005 CIRCUIT BREAKER HYDRAULIC MAGNETIC	MTY	4
262	BW50RAGU3P010	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 10A 690VA	MTY	2
263	BW50RAGU3P020	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 20A 690VA	MTY	1
264	BW50RAGU3P050	BW50RAGU-3P050 CIRCUIT BREAKER HYDRAULIC MAGNETIC	MTY	2
265	BW50SAG2P005	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 5A 690VAC	MTY	1
266	BW50SAG2P010	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 10A 690VA	MTY	1
267	BW50SAG2P015	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 15A 690VA	MTY	1
268	BW50SAG2P020	CIRCUIT BREAKER HYDRAULIC MAGNETIC 2POLE 20A 690VA	MTY	1
269	BW50SAG3P005	BW50SAG-3P005 NO FUSE BREAKER	MTY	2
270	BW50SAG3P010	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 10A 690VA	MTY	1
271	BW50SAG3P030	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 30A 690VA	MTY	1
272	BW50SAG3P040	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 40A 690VA	MTY	1
273	BW63SAG3P60A	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 60A 690VA	MTY	1
274	BW9W1SG0R	ELECTROMECHANICAL SWITCH AUXILIARY SWITCH	MTY	1
275	BZ0LRE22GA	LINK MODULE FOR ELECTRICALLY CONNECTING BM3RH MMS	MTY	2
276	BZ6N10D	BZ6N10D PERILLA PRINCIPAL FUJI ELECTRIC	SILG	2
277	BZ6V10D	CIRCUIT PROTECTION FOR EXTERNAL OPERATING HANDLE	MTY	1
278	BZ6V10D	CIRCUIT PROTECTION FOR EXTERNAL OPERATING HANDLE	SILG	1
279	BZ6V10D	CIRCUIT PROTECTION FOR EXTERNAL OPERATING HANDLE	SILM	1
280	BZ6WL10CA	SWITCH FUJI ELEC BZ6WL10CA AUXILIARY SWITCH	MTY	10
281	CP30FM1P002WA	CP30FM-1P002WA CIRCUIT PROTECTOR 2A. 1NO FUJI	MTY	64
282	CP30FM1P003	CP30FM-1P003 MINI CIRCUIT BREAKER 3 AMP, 1 POLO, F	MTY	10
283	CP30FM1P005	CP30FM-1P005 CIRCUITO PROTECTOR 1 POLES 5 AMPS FUJ	MTY	9
284	CP30FM1P005WA	CP30FM-1P005WA INTERRUPTOR 1 POLO 5 AMP. 1NO FUJI	MTY	3
285	CP30FM1P020	CIRCUIT BREAKER 1 POLO, 20A, 250VAC MCA FUJI ELECT	MTY	1
286	CP30FM1P0P1	CIRCUIT BREAKER CP30FM-1P0P1 FUJI ELECTRIC	MTY	2
287	CP30FM2P003	CP30FM-2P003 CIRCUIT PROTECTOR 3A 2P	MTY	15
288	CP30FM2P005	CP30FM-2P005 CIRCUIT PROTECTOR 5A 2 POLE	MTY	15
289	CP30FM2P007	CIRCUIT BREAKER CP30FM-2P007 FUJI ELECTRIC	MTY	1
290	CP30FM2P010	CP30FM-2P010 CIRCUIT PROTECTOR FUJI ELECTRIC	MTY	6
291	CP30FS1P005WA	BREAKER FUJI CP30FS-1P005WA	SILM	3
292	CP31E1W	CP31E/1W CIRCUIT BREAKER 1 POLO 1AMP 250V MARCA FU	MTY	2
293	CP31FM10	CIRCUIT PROTECTOR 1P 10A #CP31FM/10 MCA FUJI (NUE	SILM	2
294	CP31FM15	CIRCUIT BREAKER 1POLE 15A 250VAC (REEMPLAZO CP30FM	SILM	1
295	CP31FM20	CIRCUIT BREAKER 1POLE 20A 250VAC, MODELO NUEVO CP3	MTY	1
296	CP32D/5	BREAKER 5AMP. FUJI ELECTRIC CP32D/5	MTY	8
297	CP32D10	CP32D10 PROTECTOR DE CIRCUITO 10AT #CP32D/10 "FUJI	MTY	1
298	CP32D5W	CP32D5W PROTECTOR DE CIRCUITO 5AT #CP32D/5W "FUJI"	MTY	1
299	CP32E1	CP32E/1 CIRCUIT BREAKER 2 POLOS 1AMP 250V MARCA FU	MTY	1
300	CP32E1WD	CP32E/1WD CIRCUIT BREAKER 2 POLOS 1AMP 250V MARCA	MTY	5
301	CP32FM1	CIRCUIT BREAKER 2POLE 1A 250VAC	MTY	2
302	CP32FM2	CIRCUIT BREAKER 2POLE 2A 250VAC	MTY	1
303	CP32FM20	CIRCUIT BREAKER 2POLE 20A 250VAC	MTY	2
304	CP32FM3	CIRCUIT BREAKER 2POLE 3A 250VAC	MTY	2
305	CP32FM5	CIRCUIT BREAKER 2POLE 5A 250VAC	MTY	2
306	CP32FM7	C O D I G O E R R O N E O (UTILIZAR CP32FM7W)	MTY	2
307	CR6L150UL	FUSIBLE 600V 150AMP MOD. CR6L150UL	MTY	5
308	DR22D0LE3A	MOD. DR22D0L-E3A, BOTON INDICADO FUJI ELECTRIC	MTY	10
309	DR22D0LE3G	DR22D0L-E3G SWITCH INDICATORS 24VAC/24VDC LED ROUN	SVTAS	10
310	DR22D0LE3R	DR22D0L-E3R LAMPARA INDICADORA 24V ROJA	MTY	4

311	DR22D0LE3W	DR22D0L-E3W PILOT LAMP FUJI ELECTRIC	MTY	4
312	DR22D0LE3Y	DR22D0L-E3Y PILOT LIGHT YELLOW FUJI ELECTRIC	MTY	20
313	DR22D0LH3W	DR22D0L-H3W PILOT LAMP FUJI ELECTRIC	MTY	10
314	DR22E3LE3G	LAMPARA INDICADORA 22MM DIAM. TIPO LED COLOR VERDE	MTY	2
315	DR22E3LE3R	LAMPARA INDICADORA 22MM DIAM. TIPO LED COLOR ROJO	MTY	1
316	DR22E3LE3Y	LAMPARA INDICADORA 22MM DIAM. TIPO LED COLOR AMARI	MTY	7
317	DR22E3ME3A	DR22E3M-E3A LAMPARA INDICADORA 24 VDC NARANJA FUJI	MTY	13
318	DR22E3ME3G	DR22E3M-E3G LAMPARA INDICADORA 24 VDC VERDE FUJI	MTY	8
319	DR22E3ME3R	DR22E3M-E3R LAMPARA INDICADORA 24 VDC ROJO FUJI	MTY	23
320	DR22E3ME3Y	DR22E3M-E3Y LAMPARA INDICADORA 24VDC AMARILLA FUJI	MTY	22
321	DR30D0LE3GZM	DR30D0L-E3GZM LAMPARA INDICADORA 30MM FUJI ELECTRI	MTY	5
322	DR30D0LV4W	DR30D0L-V4W PILOT LAMP 480V. FUJI ELECTRIC	MTY	10
323	DR9P241W	DR9P241-W PLACA FUJI ELECTRIC	MTY	48
324	EW32AAG2P015B	EW32AAG-2P015B INTERRUPTOR TERMOMAGNETICO EARTH LE	MTY	1
325	EW50RAGU3P003B	CIRCUIT BREAKER HYDRAULIC MAGNETIC 3POLE 3A 440VAC	MTY	1
326	EW50RAGU3P020K	EW50RAGU-3P020K BREAKER FUJI ELEC	SILM	1
327	EW50SAG3P050K	EW50SAG-3P050K INTERRUPTOR TERMOMAGNETICO EARTH LE	MTY	1
328	EW63EAG3P060A	EW63EAG-3P060A CIRCUIT BREAKER 3P 60A 240V MCA. FU	MTY	4
329	FD511114	INDICADOR NUMERICO DE NIVEL MOD. FD5111-14 *FUJ1 E	MTY	2
330	FRN001E1S4U	FRN001E1S-4U VARIABLE FREQUENCY DRIVE, 1 HP, 380-4	SILM	1
331	HH52PFLDC24V	RELAY FUJI HH52P-FL-DC24V CONTROL MINIATURE GENERA	AAGMC	3
332	HH52PFLDC24V	RELAY FUJI HH52P-FL-DC24V CONTROL MINIATURE GENERA	AAMM	1
333	HH52PFLDC24V	RELAY FUJI HH52P-FL-DC24V CONTROL MINIATURE GENERA	MTY	20
334	HH52PFLDC24V	RELAY FUJI HH52P-FL-DC24V CONTROL MINIATURE GENERA	SILG	9
335	HH52PWLDC24V	RELEVADOR 5A 250V HH52PW-L DC24V FUJI ELECTRIC	MTY	3
336	HH54PFLDC24V	RELAY CONTROL MINIATURE GENERAL PURPOSE 4PDT, 24 V	AAGMC	5
337	HH54PFLDC24V	RELAY CONTROL MINIATURE GENERAL PURPOSE 4PDT, 24 V	MTY	1
338	HH54PLDC24V	RELAY FUJI ELEC HH54P-L DC24V MINIATURE CONTROL RE	SILM	2
339	HH62PFDC24V	MOD. HH62P-F DC24V, RELEVADOR DE CONTROL FUJI ELEC	MTY	4
340	HH62PFLDC24V	RELAY FUJI ELECTRIC HH62P-FL-DC24V CONTROL MINIATU	AAGMC	2
341	HH62PFLDC24V	RELAY FUJI ELECTRIC HH62P-FL-DC24V CONTROL MINIATU	MTY	5
342	PEB4D	SENSOR DE PROXIMIDAD PE-B4D FUJI ELECTRIC	MTY	2
343	PEB4DB	SENSOR DE PROXIMIDAD PE-B4DB FUJI ELECTRIC	MTY	2
344	RB105DE	RELEVADOR ENCAPSULADO 24V DC #RB105-DE *FUJI	MTY	29
345	RB105DE	RELEVADOR ENCAPSULADO 24V DC #RB105-DE *FUJI	SILM	6
346	RS4NDE	BASE DE RELEVADOR 24V #RS4N-DE *FUJI	AAGMC	2
347	RZ54X1	FINGER PROTECTION COVER #RZ54X1 MCA FUJI	SILM	3
348	SC0G	SC0G RELEVADOR # SC-0G *FUJI	MTY	2
349	SC0SC13AA	CONTACTOR TIPO SC-0 SC13AA FUJI ELECTRIC	MTY	6
350	SC3N	SC3N CONTACTOR 3 POLOS MOD. SC-3N, BOB. 110 V. *F	MTY	1
351	SC40	CONTACTOR TRIFASICO MOD. SC-4-0 110V 20AMP "FUJI"	MTY	5
352	SC51	CONTACTOR TRIFASICO MOD.SC-5-1 110 V MCA.FUJI ( NU	AAGMC	1
353	SC51	CONTACTOR TRIFASICO MOD.SC-5-1 110 V MCA.FUJI ( NU	AAMM	1
354	SCE02100VAC	SC-E02 100 VAC CONTACTOR FUJI ELECTRIC	MTY	3
355	SCE02G200VDC	MOD. SC-E02/G-200VDC, CONTACTOR FUJI	MTY	5
356	SCE02G24VDC	ELECTROMECHANICAL RELAY 24VDC 7.8A (43X81X80)MM DI	MTY	1
357	SCE05110VAC	CONTACTOR # SC-E05-110VAC *FUJI	MTY	2
358	SCN2Z56AC220V	CONTACTOR FUJI ELECTRIC SC-N2/Z56 AC220V, FUJI #SC	MTY	2
359	SCN4GDC24V	SC-N4/G DC24V MAGNETIC CONTACTOR FUJI ELECTRIC	MTY	2
360	SF20B1A202	SF20B1A-202 CONTACTOR 200-220 VAC 2NC FUJI	MTY	2
361	SK06LE10	CONTACTOR MOD. SK06L-E10, 24 V. DC 1NO MARCA FUJI	MTY	2
362	SK12LE10	CONTACTOR 24VDC 12A SPST-NO #SK12L-E10 MCA FUJI	AAMP6	1



363	SS3013ZD3	SS301-3Z-D3 CONTACTOR DE ESTADO SOLIDO FUJI ELECT	MTY	2
364	SZA02	SZ-A02 CONTACTO AUXILIAR FUJI ELECTRIC	MTY	2
365	SZA11	SZA11 BLOCK DE CONTACTO AUXILIAR MARCA FUJI	MTY	15
366	SZA11	SZA11 BLOCK DE CONTACTO AUXILIAR MARCA FUJI	SILG	3
367	SZA20	SZA20 CONTACTOR *FUJI ELECTRIC # SZ-A20	MTY	3
368	SZA22	SZ-A22 BLOCK DE CONTACTO AUXILIAR 2NO-2NC	MTY	10
369	SZA31	SZ-A31 AUXILIARY CONTACT BLOCK FUJI	MTY	5
370	SZA40	RELAY ACCESSORIES AUXILIARY CONTACT BLOCK FOR CONT	MTY	6
371	SZAS2	SZ-AS2, CONTACTO AUXILIAR PARA SC-N2	MTY	30
372	SZGMN1110	SZ-GM/N1-110 BOBINA 110-120VAC PARA CONTACTOR ODYS	MTY	3
373	SZGMN1220	SZ-GM/N1-220 BOBINA 220V FUJI ELECTRIC	MTY	4
374	SZGMN2S110	SZ-GM/N2S-110 BOBINA 110V FUJI ELECTRIC	MTY	5
375	SZGMN4110	SZ-GM/N4-110 BOBINA 110V FUJI ELECTRIC	MTY	3
376	SZRM	SZRM CONTACTOR MECANICO FUJI ELECTRIC	MTY	1
377	SZRW1	SZRW1 KIT DE CONEXION FUJI ELECTRIC	MTY	1
378	SZZ32	SZ-Z32 COIL SURGE SUPPRESSION UNIT FUJI ELECTRIC	MTY	1
379	SZZM1E	MAIN CIRCUIT SURGE SUPPRESSION FRONT MOUNTING FOR	MTY	2
380	TP58X1	SOCKET RELAY #TP-58X1 MCA FUJI	SILM	2
381	TP814X1	RELAY SOCKETS SCREW TERMINAL DIN RAIL 4 #TP814X1 M	SILG	6
382	TRON3036054	TR-ON/3 0.36-0.54 RELEVADOR TERMICO DE SOBRECARGA	MTY	10
383	TRON3913	RELAY, OVERLOAD - MFG: FUJI ELEC PN: TR-ON/3 9-13	AAMP6	1

<a href="#">GLOBAL TWIN SERIES MOLDED CASE CIRCUIT BREAKERS EARTH LEAKAGE CIRCUIT BREAKERS</a>
<a href="#">MOLDED CASE CIRCUIT BREAKERS / EARTH LEAKAGE CIRCUIT G-TWIN (LAMBDA) SERIES ( 1 )</a>
<a href="#">MOLDED CASE CIRCUIT BREAKERS / EARTH LEAKAGE CIRCUIT G-TWIN (LAMBDA) SERIES ( 2 )</a>
<a href="#">AR22•DR22/AR30•DR30•AH164•AH165•AH165-2 16mm/22mm/30mm DIAMETER COMMAND SWITCHES</a>
<a href="#">EMERGENCY STOP PUSHBUTTON SWITCHES AR22VQR/VQL, VPR, AR30VPR/VPL</a>
<a href="#">FUJI COMMAND SWITCHES REPLACEMENT MANUAL R SERIES AR30 / DR30</a>
<a href="#">FUJI COMMAND SWITCHES REPLACEMENT MANUAL R SERIES AR22 / DR22</a>
<a href="#">CIRCUIT PROTECTOR CP30F SERIES</a>
<a href="#">UL 489 LISTED, BU SERIES FUJI MOLDED CASE CIRCUIT BREAKERS</a>
<a href="#">CIRCUIT PROTECTOR FOR CONTROL CIRCUIT NOTICE OF DISCONTINUATION OF THE CP-F SERIES</a>

## PRESENCIA INASA

### *Matriz Monterrey, N.L.*

Conm ( 81 ) 8125-5620 Fax ( 81 ) 8372-6096 Cel. ( 81 ) 1773-0169 , gpuga@inasa.com.mx

### *Chihuahua, Chih.*

( 614 ) 417-0141 / ( 614 ) 345-9165 , cgonzalez@inasa.com.mx

### *Hermosillo, Son.*

( 662 ) 194-7811 / ( 662 ) 251-0997 , clandavazo@inasa.com.mx

### *Ciudad de México*

( 55 ) 3537-0660 , molvera@inasa.com.mx / ( 55 ) 4820-7532 , fpacheco@inasa.com.mx

### *Monclova, Coah.*

( 866 ) 137-1114 , cgarcia@inasa.com.mx

### *Puebla, Pue.*

( 222 ) 212-6487 , sgallardo@inasa.com.mx

### *Saltillo, Coah.*

( 844 ) 255-9818 , osalazar@inasa.com.mx / Fiat / Chrysler ( 844 ) 255-9782 , dhernandez@inasa.com.mx  
 Fiat / Chrysler ( 844 ) 162-2200 , acardenas@inasa.com.mx  
 Fiat / Chrysler ( 844 ) 300-2662 , jmacias@inasa.com.mx

### *San Luis Potosí, S.L.P.*

( 477 ) 143-2558 , fgurrero@inasa.com.mx , jguerrero@inasa.com.mx

### *Silao , Gto.*

(472) 722-9966 (472) 722-9738 (477) 1476993 / (449) 441-4835  
 csegoviano@inasa.com.mx dchavez@inasa.com.mx vgranados@inasa.com.mx  
 AAM ( 472 ) 118-1470 / ( 472 ) 722-8500 Ext 4071 / ( 472 ) 118-1966  
 vsegoviano@inasa.com.mx , cchavez@inasa.com.mx

### *Toluca, Edo. De México*

( 722 ) 275-2545 , jgonzalez@inasa.com.mx / ( 811 ) 464-2082  
 mvaldez@inasa.com.mx / ( 811 ) 807-5062 , jccarmona@inasa.com.mx